


2.INSTALLATION, UNINSTALLATION

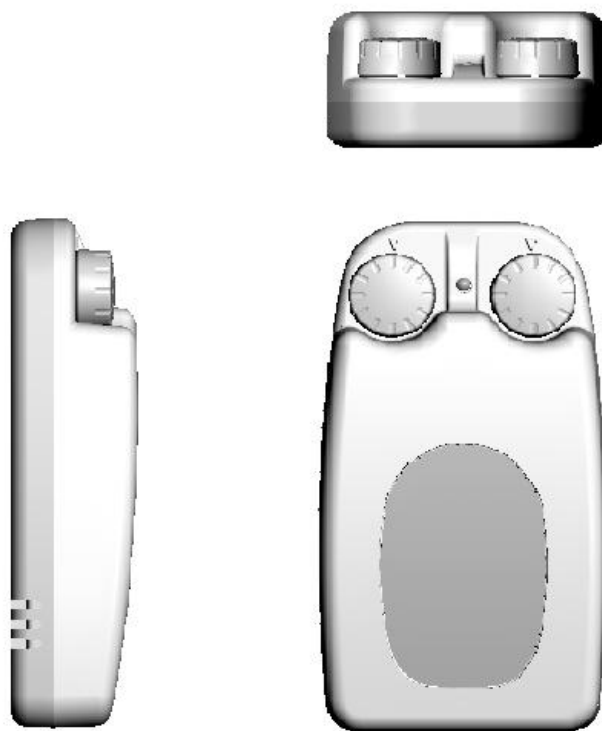


2.1 Installation


General rules:



- **ATTENTION:** this appliance must be installed only by expert technicians and comply with all national safety regulation and laws in force into the country where the product is installed.
- This appliance must be installed respecting condition and environment properties described in technical details document.
- This appliance must be installed coupling with a particular heating element. The metallic part of this appliance has to be mounted over a surface with a maximum temperature limit of 80°C (hottest mounting surface temperature for good heat conducting)
- Do not install this appliance with the control box over the radiator. This can damage the electronic control box and could cause risk of fire.

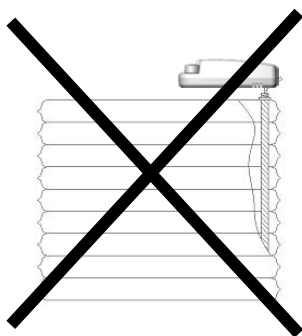

NO

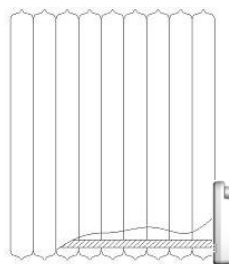


YES

- Electronic control box must be supply only with 230V. During the installation the connections must have the following color:

| | |
|---------------------|--------------------------|
| BROWN | LINE |
| BLUE OR GRAY | NEUTER |
| BLACK | FIL PILOTE COMMANDS |
| JELLOW/GREEN | EARTH (ONLY FOR CLASS I) |

Install the control box on the radiator:


- Take the electronic box from the package and handle it with care.
- Put the rear of Medusa to the radiator inserting the cables of the radiator heating element in the hole of the box.

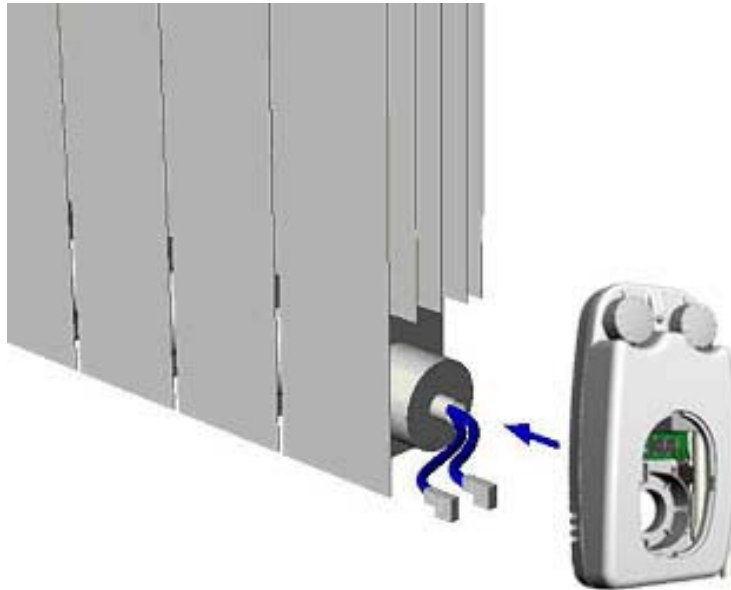

- Install the bolt using only a M27 tubular spanner, close the bolt with a minimum force of 20÷25 Nm rotation strength, while holding the box.




- Connect the two internal faston for the heating element (see the following figure).

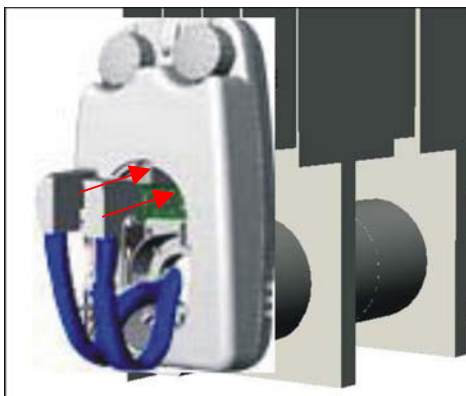

- Close the box with the front cover:
 - a) insert the front cover into the pre-installed base:




- Connect the thermostat's cable to the main power supply show below picture:

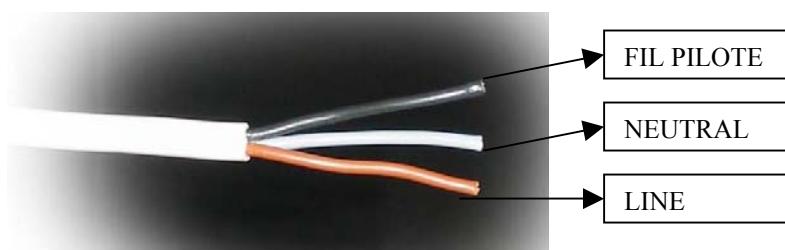

2.2 Uninstall MEDUSA from the heater

- Disconnect the thermostat's cable from the main power.
- Open the front cover. To open the box use a screw driver (3x50), insert it into the eyelet.

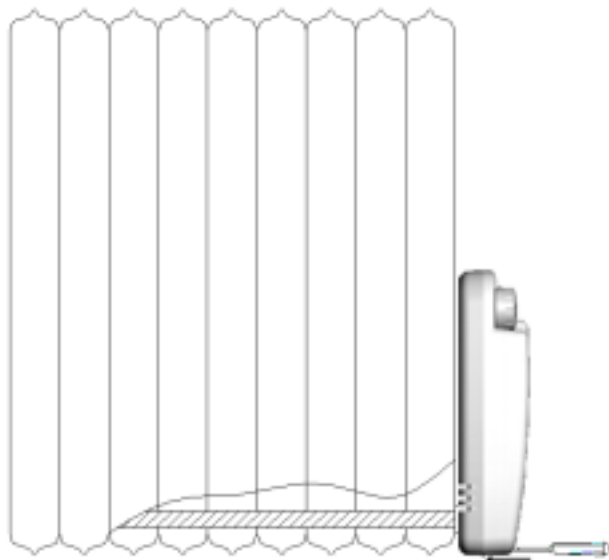

- Place and turn the screwdriver (A) as show in these diagrams, at the same time pull the cover (B) to separate it from the base.

