

## **Biotherme Bed Heater Installation to different types of beds**

***Important instructions: Retain for further use.***

***Do not use the heater folded***



**The heater shall be used only with ANA-AD, ANA-BD or LB thermostat.**

**When used with LB thermostat the continuous max.temperature must not exceed 34° C.**

***-Do not tuck in***

***-Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to supplier prior to any further use.***

***-This appliance is not intended for medical use in hospitals.***

***-Do not use pins.***

***-Do not use if wet.***

***-The heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the heater by a person responsible for their safety. Children should be supervised to ensure that they do not play with the heater.***

### ***Installation depending of type of bed:***

#### **Installation in Innerspring beds of “Continental” type.**



Continental type

Heating pad shall be placed inside the mattress cover, either in the bottom of bedding pad or in the bottom of the “Continental” part (The middle section of the bed)

**Installation in Innerspring beds or foam beds of soft and flexible type.**



Innerspring or foam, Flexible type.

Heating pad shall be placed inside the mattress cover, either in the bottom of bedding pad or in the bottom of the soft and flexible part (The lower part of the bed). If used in beds with flexible mattress on hard surface; place the heating pad direct on the hard bottom of the bed under the mattress outside the mattress cover.

**Installation in Innerspring beds or foam beds type: “Adjustable”**



Adjustables

Heating pad shall be placed inside the mattress cover, either in the bottom of bedding pad or in the bottom of the soft and flexible lower Part of the bed.

**Installation in Innerspring beds built on wooden frame with wood or fibre board bottom.**



Wooden framed innerspring beds

Heating pad shall be placed in the bottom of the bed. Either on top of the wooden slats with a piece of fibre board underneath as described below, or inside the mattress cover if it is deductable.

It can also be placed inside the cover in bottom of the bedding pad or be placed under the wooden slats under the bed if supported with a fibreboard pressing the heating pad up against the bottom wooden slats.

Avoid placing the element hanging over open air caps between the slats in bottom of wood framed innerspring mattresses. If added to these type of beds please place an hard fibreboard under the heater covering at least 50 mm outside the heater edges.

## **Installation in Bedding pads**



Bedding Pads

Heating pad shall be placed inside the mattress cover, in the bottom of bedding pad. Make sure that the heating pad is not closer the edges of the mattress pad than 50 mm at any side.

Manufacturer: Foilpoint Oy  
Kaivopuistontie 33  
26100 Rauma  
Finland

Technical specifications: Type: ANA 4  
Input: 230V ~ 50Hz / 70W  
IP X7